

Engine Oil & Filter

Checking & Adding Oil

Refer to *Safety Precautions* on page 119.

Check the engine oil level each day before operating your ATV and add if needed.

The dipstick is located at the front left crankcase cover.

Before riding your ATV, check the engine oil level.

1. Park your ATV on a firm, level surface.
2. Start the engine in a well-ventilated area and let it idle for 3 – 5 minutes. If the air temperature is below 10°C (50°F), let the engine idle for an additional 5 minutes (a total of 10 minutes).
3. Stop the engine and wait for 2 – 3 minutes.
4. Remove the oil check lid (1) by disengaging the stud (2) from the grommet (3) and releasing the tabs (4) from the slits.

LEFT SIDE

