

# Brakes

---


## Brake Light Switch Adjustment

Refer to *Safety Precautions* on page 119.

### Rear Brake Only:

Check the operation of the rear brake light switch (1) at the right side behind the engine from time to time. Adjustment is done by turning the adjusting nut (2). Hold the rear brake light switch and turn the nut in direction (A) if the switch operates too late and in direction (B) if the switch operates too soon.

### RIGHT REAR

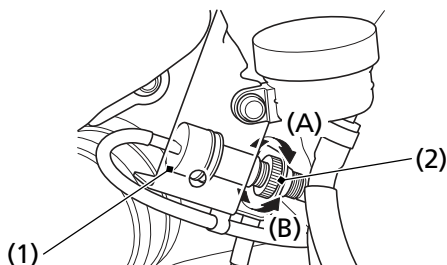

(1) rear brake light switch

(2) adjusting nut