

# Indicators & Displays

---


## Drive Mode Indicator

The drive mode indicator ( 1 ) shows the selected drive mode when the ignition switch is in the ON ( I ) position.


The indicator shows: LOW and ESP (page 76).

LOW indicator will be displayed when the shift lever is in low (L) in the ESP mode.

TRX500FA

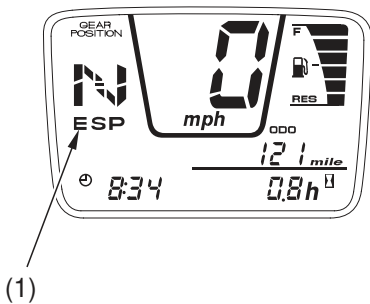

TRX500FPA

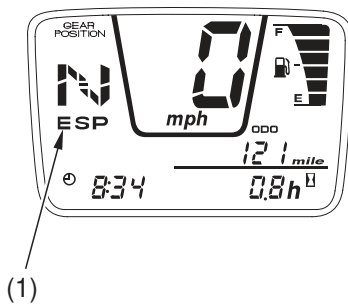

(1) drive mode indicator