


Controls & Features

Recoil Starter (Canada only)

RIGHT SIDE

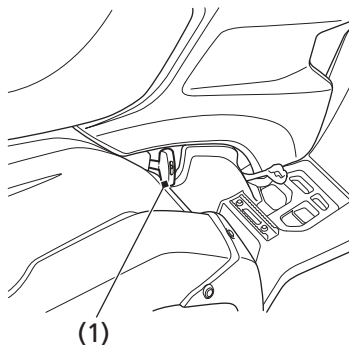

(1) recoil starter

The recoil starter (1) is used to start the engine when the battery is low. See *Using the Recoil Starter (Canada only)* [page 85](#).