

Index

| | |
|-------------------------------------|-----|
| oil, | |
| engine | 129 |
| front final gear | 141 |
| rear final gear | 138 |
| operation component locations | 11 |
| owner's manual storage | 121 |
| oxygenated fuels | 248 |

P

| | |
|---|-----|
| parking | 106 |
| passengers, no carrying | 61 |
| pavement, no riding on | 75 |
| pinging, engine | 126 |
| plug, spark | 161 |
| pre-ride inspection | 63 |
| problems, unexpected | 212 |
| propeller shaft boots & yoke joint boot | 189 |
| protective apparel | 58 |
| PS (Electric Power Steering) (TRX500FE2 only) | 55 |

R

| | |
|------------------------------------|--------|
| rear fender cover removal | 123 |
| rear final gear oil | 138 |
| recoil starter (Canada only) | 42, 85 |
| removal, | |
| rear fender cover | 123 |
| seat | 122 |
| tank cover assembly | 124 |