

# Emergency Gear Selection & Operation

---

If the shift switches do not operate, use the following procedure to manually select a gear so you may drive the vehicle to a location where it can be loaded and transported to your dealer.

1. Turn the ignition switch to the ON (I) position.
2. Remove the seat ([page 122](#)).
3. Remove the rear fender cover ([page 123](#)).
4. Remove the gear change tool from under the rear fender cover ([page 120](#)).
5. Check the neutral indicator.  
If the transmission is in neutral, go to step 6.  
If the transmission is not in neutral, use the gear change tool to shift to neutral so you will be able to start the engine. Refer to *How to Shift Gears Manually*: ([page 219](#)).
6. Apply the parking brake.
7. Press the start/over ride button to start the engine.
8. Select the gear you want. For running on level ground: 3rd or 4th gear. For mountainous roads: 2nd or 3rd gear. Refer to *How to Shift Gears Manually*: ([page 219](#)).
9. Return the gear change tool to under the rear fender cover.
10. Install the rear fender cover.
11. Install the seat.
12. Get on the ATV, release the parking brake, and drive it at a safe speed to a place where it can be repaired or serviced.