


# Indicators & Displays

---

## Digital Clock

The digital clock (1) shows time with the clock mark (2) when the ignition switch is ON (q).

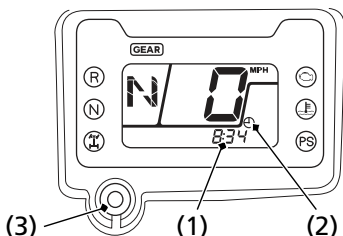

(1) digital clock

(2) clock mark

(3) mode select button

To adjust the time, proceed as follows:

1. Turn the ignition switch ON (q) and select the digital clock mode.
2. Press and hold the mode select button (3) until the display start blinking.
3. To advance the display 1 minute at a time, press and release the mode select button for 0.5 seconds.  
Press and hold the mode select button the display will begin advancing fast. Press and hold the button for:
  - 0.5 – 5.5 seconds: advance one minute at a time.
  - 5.5 – 10.5 seconds: advance five minutes at a time.
  - 10.5 seconds or more: advance ten minutes at a time.
4. Release the mode select button when the display reaches the desired time.
5. To end the adjustment, press and release the mode select button for less than 0.5 seconds or turn the ignition switch to OFF (w).

After the battery is reconnected (page 193), check the clock. Readjust the clock if necessary.