


Coolant

5. Remove the clips.
6. Remove the left radiator grill cover (5) by releasing the tab A (6), tab B (7), tab C (8), hook A (9) and hook B (10).

LEFT FRONT

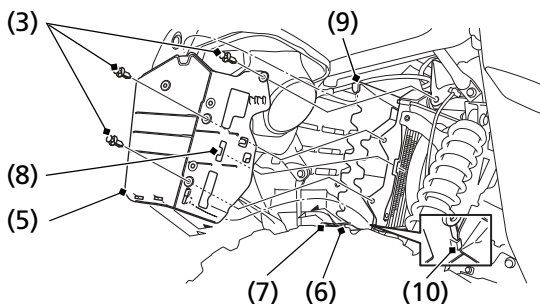

- | | | |
|-------------------------------|------------|-------------|
| (3) clips | (7) tab B | (10) hook B |
| (5) left radiator grill cover | (8) tab C | |
| (6) tab A | (9) hook A | |

(cont'd)