

Maintenance Component Locations

battery
fuse box
main fuse 1
main fuse 2
EPS fuse


front suspension spring
pre-load adjuster

seat latch

coolant reserve tank

fuel fill cap

air cleaner

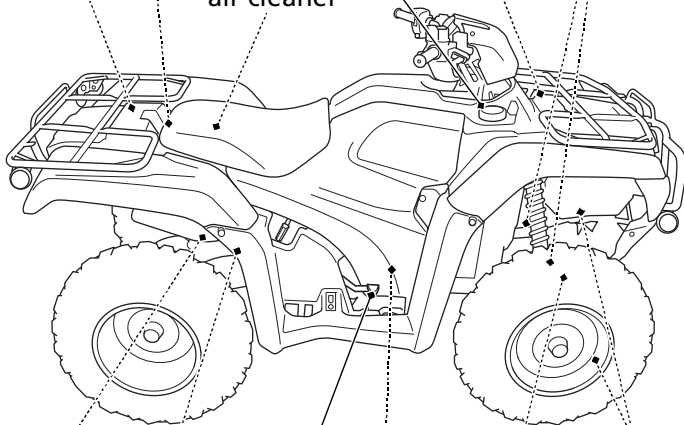

rear brake light
switch

engine
oil filter

front brake
caliper

air cleaner housing
drain tube

front final gear oil fill cap
front final gear oil drain bolt

rear brake pedal