


# Coolant

5. Remove the clips.
6. Remove the left radiator grill cover (5) by releasing the tab A (6), tab B (7), tab C (8), hook A (9) and hook B (10).

## LEFT FRONT

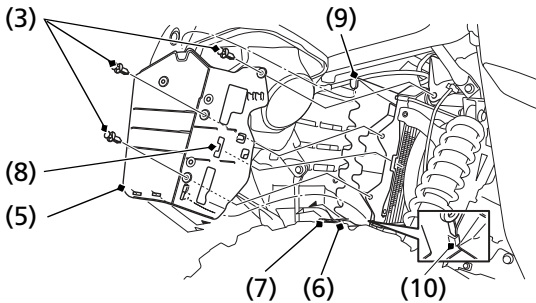

- |                               |            |             |
|-------------------------------|------------|-------------|
| (3) clips                     | (7) tab B  | (10) hook B |
| (5) left radiator grill cover | (8) tab C  |             |
| (6) tab A                     | (9) hook A |             |

(cont'd)