

If a Fuse Blows

EPS (Electric Power Steering) Fuse Access

1. Turn the ignition switch to OFF (O) before checking the fuse.
2. Remove the seat (page 124).
3. Remove the rear fender cover (page 125).
4. To access the EPS fuse block (1), remove the fuse cover (2).
If the EPS fuse block is blown, see your dealer for this service.
5. Install the fuse cover.
6. Install the rear fender cover.
7. Install the seat.

UNDER REAR FENDER COVER

