

# Controls & Features

## 4WD Switch

Your ATV is equipped with a 4WD switch (1), which permits a choice between the “2WD” and “4WD” drive modes. Select a drive mode that’s suitable for your riding.

Keep both hands on the handlebar while machine is in motion and come to a complete stop before using the 4WD switch.

The 4WD switch is located above the throttle lever. To select the drive mode, with your ATV stopped, push the 4WD switch.


To check your present drive mode, look at the 4WD indicator (2).

2WD mode: the 4WD indicator disappears when the 2WD mode engages.

4WD mode: the 4WD indicator appears when the 4WD mode engages.

If the 4WD indicator does not appear when selecting the 4WD mode, accelerate your ATV slowly until the 4WD indicator appears.

The 4WD indicator and differential lock indicator both flash together when there is any abnormality in the front final gear system. See *Front Differential Lock and Speed Limiter Over-Ride (Differential Lock Switch and Start/Over Ride Button)*, [page 38](#).

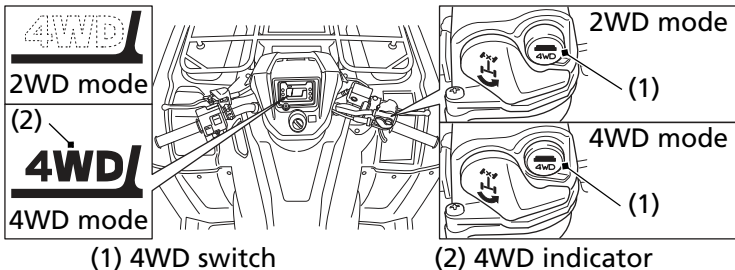

(1) 4WD switch

(2) 4WD indicator