

# If a Fuse Blows

---

*PS (Electric Power Steering) Fuse Access (TRX500FM2 only)*

1. Turn the ignition switch to OFF (O) before checking the fuse.
2. Remove the seat ([page 120](#)).
3. Remove the rear fender cover ([page 121](#)).
4. To access the PS fuse (1), remove the fuse cover (2).  
If the PS fuse is blown, see your dealer for this service.
5. Install the fuse cover.
6. Install the rear fender cover.
7. Install the seat.

## UNDER REAR FENDER COVER

