

Operation Component Locations

rear brake lever/
parking brake lever

P/R lever

headlight switch

front brake lever

4WD switch

ignition switch

throttle lever

engine stop switch

differential lock
switch

start/over ride button

headlight dimmer switch

