

# Indicators & Displays


---

## Coolant Temperature Gauge

The coolant temperature gauge (1) shows coolant temperature with the coolant temperature mark (2) while the ignition switch is ON (1).

The normal operating temperature range is within the section between the 1st segment (3) and 4th segment (4).

When coolant temperature is low, the coolant temperature gauge will display "Lo" (5).

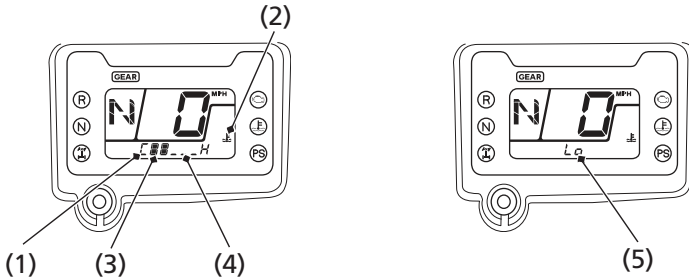

- (1) coolant temperature gauge
- (2) coolant temperature mark
- (3) 1st segment

- (4) 4th segment
- (5) "Lo"