

Is Your ATV Ready to Ride?

Cable Check the cable housings for wear. Check the fittings for looseness. Replace or tighten as needed.

Lights Make sure the headlights, brake light and taillight are working properly.

If you are carrying cargo, also check the following:

Loading Limits Make sure you do not exceed the load limits ([page 66](#)).

Cargo Check that all cargo is secure.

Check these items after you get on the ATV:

Throttle Check the freeplay and adjust if needed. Press the throttle to make sure it moves smoothly without sticking, and snaps shut automatically when it is released, in all steering positions ([page 155](#)).

Brakes Squeeze the front and rear brake levers and step on the rear brake pedal to check that the controls operate normally. Check for proper freeplay ([pages 171, 173](#)). Make sure there is no brake fluid leakage.

Reverse Assist Lever Check the freeplay and adjust if needed ([page 158](#)). Make sure the lever operates smoothly without sticking.

(cont'd)