


If a Fuse Blows

Main Fuses Access

1. To prevent an accidental short circuit, turn the ignition switch to OFF (O) before checking or replacing the fuses.
2. Remove the seat ([page 120](#)).
3. Remove the rear fender cover ([page 121](#)).
4. To access the main fuse 1 (2), remove the fuse cover (3).
5. To access the main fuse 2 (4), remove the fuse box cover (5).

UNDER REAR FENDER COVER

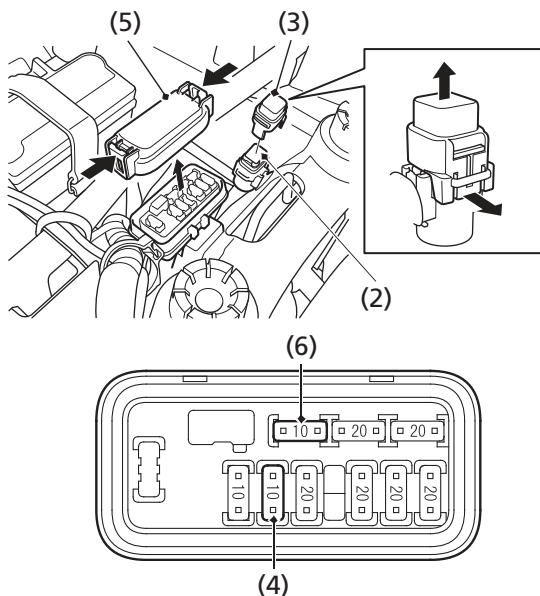

- (2) main fuse 1
- (3) fuse cover
- (4) main fuse 2

- (5) fuse box cover
- (6) spare fuse

6. Pull the main fuses out.
If the main fuse 1 is blown, see your dealer for this service.
If the main fuse 2 is blown, install the spare fuse (6).
7. Install the fuse cover.