Indicators & Displays

| 6 | Multi-function | The display includes the following |
|---|------------------|---------------------------------------|
| | display | functions. Display Check. |
| | 4WD indicator | Shows when the 4WD drive mode is |
| | | engaged. If the indicator blinks with |
| | | the differential lock indicator when |
| | | there is any abnormality in the front |
| | | final gear system. See page 38. |
| | Gear position | Shows the gear position (page 23). |
| | indicator | |
| | Maintenance | Shows when specified maintenance |
| | minder indicator | interval is reached (page 32). |
| | Speedometer | Shows riding speed. |
| | Fuel gauge | Shows approximate fuel supply |
| | | available (page 24). |
| | Digital clock | Shows the time (hours and minutes) |
| | | (page 26). |
| | Odometer | Shows accumulated mileage |
| | | (page 27). |
| | Tripmeter | Shows mileage per trip (page 27). |
| | Coolant | Shows approximate coolant |
| | temperature | temperature (page 28). |
| | gauge | |
| | Hourmeter | Shows hours and tenths of hours of |
| | | engine operation (page 30). |
| | Maintenance | Inform when the mileage or operating |
| | tripmeter | hours on your ATV approaches and |
| | Maintenance | passes the interval specified on the |
| | hourmeter | maintenance schedule (page 31). |