


# Engine Oil & Filter

---

2. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1) and sealing washer (2).

## UNDER ENGINE

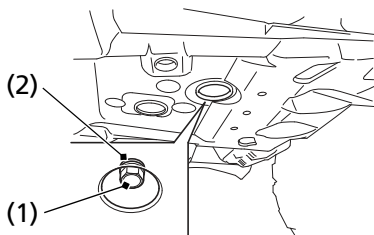

(1) engine oil drain bolt

(2) sealing washer

(cont'd)