


Controls & Features


Start/Override Button



LEFT HANDLEBAR

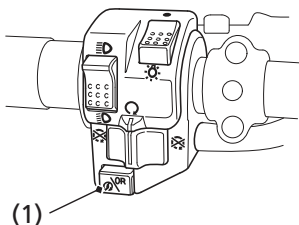

(1) start/override
button

 START or SPEED LIMITER
OVERRIDE MODE

The start/override button (1) is used for starting the engine and activate the speed limiter override mode. Pushing the button in starts the engine. See *Starting Procedure*, page 80.

When the engine is not running and the start/override button is pushed, the starter motor will crank the engine. The starter motor will not operate if the engine stop switch is in the OFF (⊗) position when the start/override button is pushed.

To activate the speed limiter override mode, see *Front Differential Lock and Speed Limiter Override (Differential Lock Switch and Start/Override Button)*, page 36.