

Index

| | |
|------------------------------|-----|
| stalling on a hill | 95 |
| start/over ride button | 39 |
| starting, | |
| engine | 78 |
| troubleshooting | 206 |
| stop switch, engine | 40 |
| stopping engine | 83 |
| storage, | |
| ATV | 198 |
| owner's manual | 119 |
| suspension, | |
| adjustment | 163 |
| spring pre-load | 164 |
| switch, | |
| 4WD | 35 |
| differential lock | 36 |
| engine stop | 40 |
| headlight | 41 |
| headlight dimmer | 41 |
| ignition | 34 |

T

| | |
|-----------------------------------|--------------|
| tank cover assembly removal | 122 |
| throttle, | |
| cable | 154, 155 |
| lever | 43, 154, 155 |
| tires, | |
| air pressure | 175 |
| flat | 209 |
| repairing | 179 |
| replacing | 180 |
| thread conditions | 177, 178 |
| tool kit | 118 |