


# Controls & Features

## Start/Override Button




### LEFT HANDLEBAR

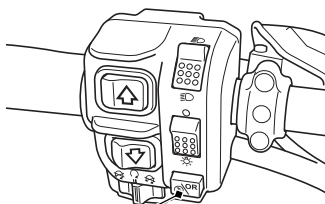

(1) start/override  
button

(1)  START or SPEED LIMITER  
OVERRIDE MODE

The start/override button (1) is used for starting the engine and activate the speed limiter override mode. Pushing the button in starts the engine. See *Starting Procedure*, page 86.

When the engine is not running and the start/override button is pushed, the starter motor will crank the engine. The starter motor will not operate if the engine stop switch is in the OFF () position when the start/override button is pushed.

To activate the speed limiter override mode, see *Front Differential Lock and Speed Limiter Override (Differential Lock Switch and Start/Override Button)*, page 38.