


Coolant

To clean the radiator core and radiator grill plate:

1. Remove the radiator cap lid (page 155).
2. Remove the reserve tank (1) by removing the bolt (2) and clips (3) (page 135).
3. Release the hoses (4) from the guides.
4. Hold the reserve tank being careful not to spill the coolant.

LEFT FRONT

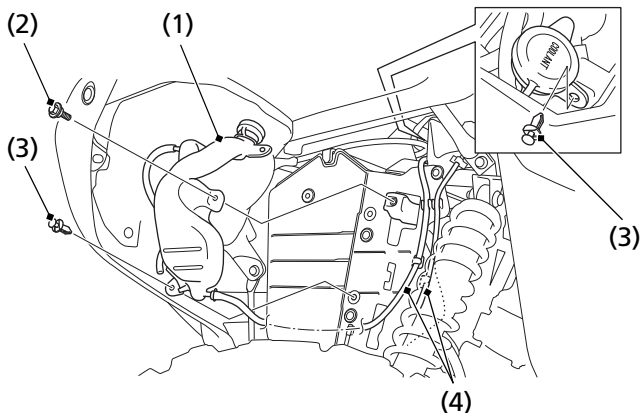

(1) reserve tank
(2) bolt

(3) clips
(4) hoses