


If a Fuse Blows

- Pull the main fuse 2 (4) out with the fuse puller on the underside of the rear fender cover (page 121).
If the main fuse 2 is blown, install the spare fuse (6).
- Install the fuse cover.

Circuit Fuses Access

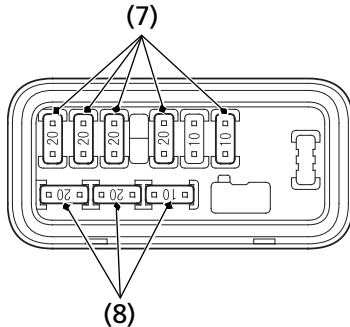

(7) circuit fuses

(8) spare fuses

- To check or replace a circuit fuse (7), pull the old fuse out of its retaining clips with the fuse puller on the underside of the rear fender cover (page 121).
If the fuse is blown, replace it with a spare fuse (8) of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

NOTICE

Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.

- Install the fuse box cover.
- Install the rear fender cover.
- Install the seat.

(cont'd)