


# Indicators & Displays

---

## Drive Mode Indicator

The drive mode indicator ( 1 ) shows the selected drive mode when the ignition switch is in the ON ( I ) position.

The drive mode indicator ( 1 ) displays ESP when the manual shift (ESP) mode is selected. The ESP display vanishes when the automatic shift (AUTO) mode is selected.

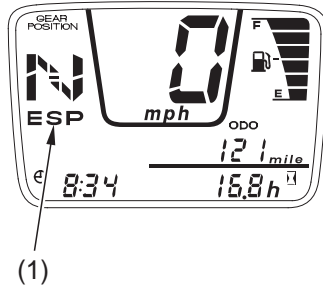

(1) drive mode indicator