

# Indicators & Displays

---

1	Odometer/tripmeter select button	Selects display of the odometer or tripmeter A or tripmeter B ( <a href="#">page 24</a> ). This button also used to reset the oil change indicator ( <a href="#">page 22</a> ).
2	RESET button	Resets the tripmeter to zero (0) ( <a href="#">page 24</a> ). This button also used to reset the oil change indicator ( <a href="#">page 22</a> ).
3	Reverse indicator	Lights when the transmission is in reverse. <i>Lamp Check</i> .
4	4WD indicator	Lights when the drive mode is in the 4WD mode. The 4WD indicator blinks if there is a possible problem with the 2WD/4WD select system. See your dealer as soon as possible. <i>Lamp Check</i> .
5	High oil/coolant temperature indicator	Lights when engine oil and/or coolant temperature is high enough to adversely affect the service life of the engine. If the high oil/coolant temperature indicator comes on while you are riding, immediately bring the vehicle to a stop, turn the engine off and let it cool. See <a href="#">page 195</a> . <i>Lamp Check</i> .