

# Maintenance Schedule

Maintenance Procedures:

I: inspect and clean, adjust, lubricate, or replace, if necessary

C: clean

A: adjust

L: lubricate

R: replace

ITEMS	FREQUENCY	WHICHEVER COMES FIRST ⇒	INITIAL MAINT.			REGULAR MAINT. INTERVAL		Refer to page
			mi	100	600	1200		
			km	150	1000	2000		
			MONTH	1	6	12		
NOTE	HOURS	20	100	200				
*	FUEL LINE					I		—
*	THROTTLE OPERATION					I		136
	AIR CLEANER	NOTE 1				C	C	131
	AIR CLEANER HOUSING DRAIN TUBE	NOTE 2				I	I	135
	SPARK PLUG					I	I	138
*	VALVE CLEARANCE				I	I	I	142
	ENGINE OIL				INITIAL= 100 mi (150km), 20 operating hours or 1 month: R			114
	ENGINE OIL FILTER				REGULAR= Every 600 mi (1,000 km), 100 operating hours or 12 months: R			119
*	ENGINE IDLE SPEED				I	I	I	—
	RADIATOR COOLANT	NOTE 3				I	I	126
*	COOLING SYSTEM	NOTE 2				I	I	—

\* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual ([page 222](#)).