

Maintenance Schedule

ITEMS	FREQUENCY	WHICHEVER COMES FIRST	INITIAL	REGULAR		Refer to page
			MAINT.	MAINT. INTERVAL		
			mi	100	600	
		km	150	1000	2000	
MONTH	1	6	12			
NOTE	HOURS	20	100	200		
	DRIVETRAIN BOOTS					161
	REAR FINAL GEAR CASE OIL AND DIFFERENTIAL OIL			(R. EVERY 2 YEARS)		122 124
*	BRAKE FLUID	NOTE 3				145
*	BRAKE PADS WEAR	NOTE 1, 2				148
*	BRAKE LIGHT SWITCH					152
	BRAKE SYSTEM					145
	GUARDS					160
*	SUSPENSION					—
*	SPARK ARRESTER			C	C	143
*	NUTS, BOLTS, FASTENERS					—
**	WHEELS/TIRES					—
**	TIE-ROD AND JOINT BOOTS					—
**	STEERING SHAFT HOLDER BEARINGS					—
**	STEERING SYSTEM					—

* Should be serviced by your dealer, unless you have the proper tools and service data, and are mechanically qualified. Refer to the official Honda Service Manual ([page 222](#)).

** In the interest of safety, we recommend these items be serviced only by your dealer.