


# Indicators & Displays

## Odometer

When selected, the odometer (1) registers total distance traveled in miles while the ignition is ON (q). To change the display from tripmeter to odometer, press and release the odometer/tripmeter select button (2).

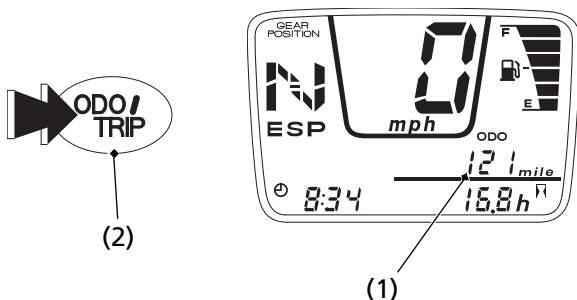

(1) odometer

(2) odometer/tripmeter select button