

Spark Plugs

Spark Plug Recommendation

standard spark plug	CPR6EB-9 (NGK)
---------------------	----------------

Use only the recommended type of spark plug in the recommended heat range.


NOTICE

Using spark plugs with an improper heat range can cause engine damage.

Spark Plug Inspection & Replacement

Refer to *Safety Precautions* on page 99.

UNDER SEAT

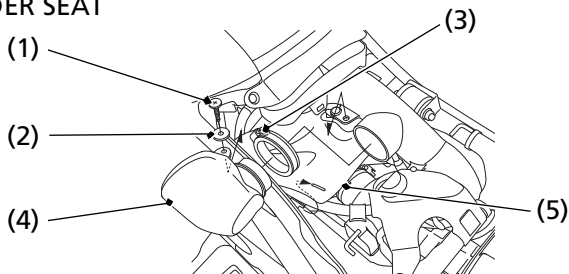

(1) pin

(2) clip

(3) band screw

(4) resonance chamber

(5) rubber cover

1. Remove the seat (page 110).
2. Remove the pin (1) by a Phillips screwdriver and pull the clip (2) out of the hole.
3. Loosen the band screw (3) and remove the resonance chamber (4).
4. Unhook the rubber cover (5).