

# Engine Oil

## Changing Engine Oil


Refer to *Safety Precautions* on [page 84](#).

This procedure requires mechanical skill and professional tools such as a torque wrench as well as a means for disposing of the drained fluid ([page 160](#)). If you do not have the skills or the tools, see your dealer.

### *Drain the Engine Oil:*

1. With the ATV on level ground, remove the oil fill cap/dipstick from the right crankcase cover.
2. Place an oil drain pan under the crankcase and remove the engine oil drain bolt (1).

### UNDER ENGINE

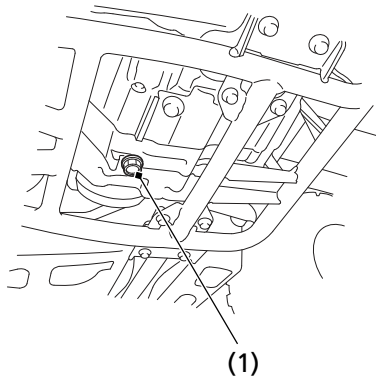

(1) engine oil drain bolt

(cont'd)