

Storing Your Honda

9. Inflate the tires to their recommended pressures ([page 128](#)).
10. Store your ATV in an unheated area, free of dampness, away from sunlight, with a minimum of daily temperature variation.
11. Place your ATV on blocks to lift all tires off the floor.
12. Cover your ATV with a porous material. Avoid using plastic or similar non-breathing, coated materials that restrict air flow and allow heat and moisture to accumulate.

NOTICE

Do not store your ATV in an upright position for extended periods of time. The ATV should be stored with all four tires on the ground. Gasoline could clog the fuel tank vent check valve and cause damage to your ATV.

Removal from Storage

Refer to *Safety Precautions* on [page 84](#).

1. Uncover and clean your ATV.
2. If your ATV has been stored for more than four months – change the engine oil ([page 103](#)).
3. If your ATV has been stored for more than two months – ask your dealer to drain and replace the fuel.
4. Charge the battery ([page 146](#)) as required. Install the battery.
5. Lubricate the drive chain ([page 140](#)).
6. Perform a pre-ride inspection ([page 36](#)), then test-ride your ATV at low speeds.