

## Instruments *(Continued)*

### Available driving distance

When the 1st (E) segment of the fuel gauge is flashed (less than 1.0 US gal/4.0 liters), the estimated available driving distance is indicated. When the amount of remaining fuel becomes less than 0.2 US gal/1.0 liter, "--" will be indicated. The indicated available driving distance is by calculation depending on the driving conditions, and the indicated figure may not always be the actual allowable distance.

When the fuel gauge near to E or when E segment blinks, fill fuel promptly.



### Remaining fuel

When the 1st (E) segment of the fuel gauge is flashed (less than 1.0 US gal/4.0 liters), the estimated amount of remaining fuel can be selected. When the amount of remaining fuel becomes less than 0.2 US gal/1.0 liter, "--" will be indicated. The amount of remaining fuel is calculated from the driving conditions. The indicated amount of remaining fuel may be different from the actual amount. When the fuel gauge near to E or when E segment blinks, fill fuel promptly.

