

Meter Check

The speedometer needle will swing to the maximum scale on the dial once when you turn the ignition switch ON.

The meter is identified in the table on page 16 with the words: *Meter Check*.

If the speedometer needle does not swing to the maximum scale on the dial once when it should, have your Honda dealer check for problems.