## **Gauges, Indicators & Displays**

9	high beam indicator (blue)	Lights when the headlight is on high beam.
10	fuel reserve indicator (amber)	When this indicator comes on while riding, fuel reserved in the tank is about:  0.66 US gal (2.5 ₺)
11	left turn signal indicator (green)	Flashes when the left turn signal operates.
12	Anti-lock Brake System (ABS) indicator (amber) (VT1300CXA)	Lights when there is any abnormality in the Antilock Brake System (ABS). Normally, this indicator comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at a speed above 6 mph (10 km/h). If the indicator comes on while riding, stop the motorcycle in a safe place and turn off the engine. Refer to Anti-lock Brake System (ABS) Indicator, page 51. For information about Anti-lock Brake System (ABS), see page 50. Lamp Check.