

Basic Operation & Riding

This section gives basic riding instructions, including how to start and stop your engine, and how to use the throttle, clutch, and brakes. It also provides important information on riding with a passenger or cargo.

To protect your new engine and enjoy optimum performance and service life, refer to Break-in Guidelines (page 199).

To protect the catalytic converters in your motorcycle's exhaust system, avoid extended idling and the use of leaded gasoline.

Safe Riding Precautions	40
Starting & Stopping the Engine	41
Preparation.....	41
Starting Procedure	42
Flooded Engine	43
Bank Angle Sensor Ignition Cut-off System	43
How to Stop the Engine	44
Shifting Gears.....	45
Braking	47
(VT1300CXA)	
Anti-lock Brake System (ABS)	50
(VT1300CXA)	
Anti-lock Brake System (ABS) Indicator.....	51
Parking	52
Theft-prevention Tips	55
Riding with a Passenger or Cargo.....	56