


Seat Removal

Refer to *Safety Precautions* on page 62 .

The seat must be removed to access the other documents and to check the color label.

Removal

1. Remove the seat mounting bolt A (1) and collar A (2).
2. Remove the seat strap (3) by removing the seat mounting bolts B (4), washers (5) and collars B (6).
3. Remove the rear seat (7).
4. Remove the seat mounting bolts C (8).
5. Pull the front seat (9) back and up.

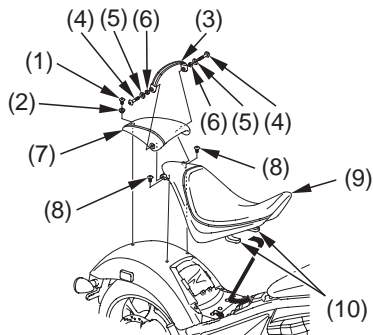

- | | |
|----------------|----------------|
| (1) bolt A | (6) collars B |
| (2) collar A | (7) rear seat |
| (3) seat strap | (8) bolts C |
| (4) bolts B | (9) front seat |
| (5) washers | (10) tabs |