
Coolant

LEFT SIDE

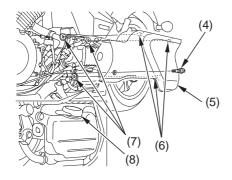

(4) bolt

- (7) frame grommets
- (5) left rear cover
- (8) reserve tank cap

(6) prongs

- 2. Remove the bolt (4).
- 3. Carefully pull the left rear cover (5) out until the prongs (6) are clear of the frame grommets (7).
- 4. Remove the left rear cover.
- 5. Remove the reserve tank cap (8). Always add coolant to the reserve tank. Do not attempt to add coolant by removing the radiator cap.
- Add coolant to the reserve tank as required to bring the coolant level to the UPPER level mark.
- 7. Install the reserve tank cap.
- 8. Position the left rear cover so the prongs are aligned with the frame grommets.
- 9. Push the prongs in.
- 10. Install the bolt.