


I Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ [P. 24](#)
- Check that there is gasoline in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

I Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is  (Run) position ➤ [P. 22](#)
- Check for a blown fuse ➤ [P. 95](#)
- Check for a loose battery connection or battery terminal corrosion ➤ [P. 41](#)
- Check the condition of the battery ➤ [P. 91](#)

If the problem continues, have your motorcycle inspected by your dealer.