

Troubleshooting

Engine Will Not Start	P. 80	Electrical Trouble	P. 92
Overheating (High coolant temperature indicator is on)	P. 81	Battery Goes Dead	P. 92
Warning Indicators On or Flashing	P. 82	Burned-out Light Bulb	P. 92
Low Oil Pressure Indicator	P. 82	Blown Fuse.....	P. 96
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 82		
ABS (Anti-lock Brake System) Indicator			
(VT1300CXA only)	P. 83		
Tire Puncture	P. 84		
Emergency Repair Using a Tire Repair Kit ..	P. 84		
Removing Wheels	P. 84		