

Ignition switch

Switches the electrical system on/off.

- ▶ Key can be removed when in the OFF position.

ON

Turns electrical system on for starting/riding.

OFF

Turns engine off.

