
## **Switches**

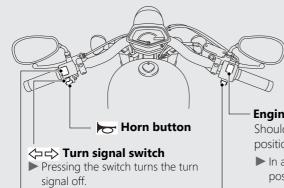

## Headlight dimmer switch

- ≣D : High beam
- ≣D : Low beam

## Engine stop switch

Should normally remain in the  $\bigcap$  (Run) position.

► In an emergency, switch to the X (Stop) position (the starter motor will not operate) to stop the engine.

## (3) Start button

Headlight turns off when operating the starter motor.