


## Tire Puncture ► Removing Wheels

3. Remove the muffler bracket bolt A, bolt B, nuts and washers.
4. Remove the muffler.

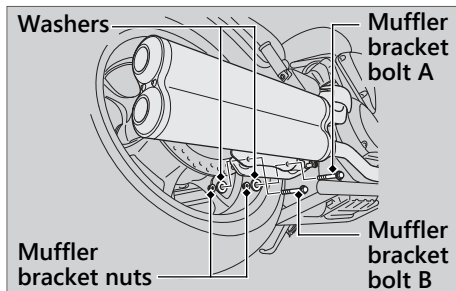

5. While holding the outer end of the rear axle shaft with a wrench, remove the rear axle nut and washer.
6. Loosen the axle holding bolt.
7. Support your vehicle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.

