Tire Puncture <a>Panceton Removing Wheels

- **5.** Remove the front axle shaft, front wheel and side collars.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces.
 - Do not pull the brake lever while the wheel is off the motorcycle.

