

Troubleshooting

Engine Will Not Start	P. 80
Overheating (High coolant temperature indicator is on)	P. 81
Warning Indicators On or Flashing	P. 82
Low Oil Pressure Indicator	P. 82
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL).....	P. 82
Tire Puncture	P. 83
Electrical Trouble	P. 92
Battery Goes Dead	P. 92
Burned-out Light Bulb.....	P. 92
Blown Fuse	P. 96