
 
Switches

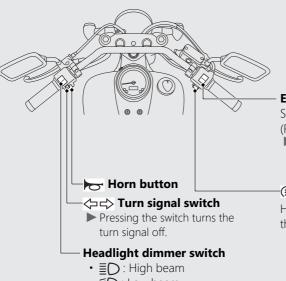

• ≣D : Low beam



Engine stop switch

Should normally remain in the \bigcap (Run) position.

In an emergency, switch to the (Stop) position (the starter motor will not operate) to stop the engine.

③ Start button

Headlight turns off when operating the starter motor.