# Refueling

# Fuel fill cap Ignition key Lower edge of filler neck

Do not fill with fuel above the lower edge of the filler neck.

**Fuel type:** Unleaded gasoline only **Recommended fuel octane number:** Pump Octane Number (PON) 86 or higher. **Tank capacity:** 3.70 US gal (14.0 L)

Refueling and Fuel Guidelines P.13

### Opening the Fuel Fill Cap

Open the lock cover, insert the ignition key, and turn it clockwise to open the fuel fill cap.

### **Closing the Fuel Fill Cap**

- After refueling, align the fuel fill cap latch with the slot in the filler neck. Push the fuel fill cap into the filler neck until it snaps closed and locks.
- 2 Remove the ignition key and close the lock cover.
  - ➤ The ignition key cannot be removed if the fuel fill cap is not locked.

## AWARNING

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.