
 
Switches

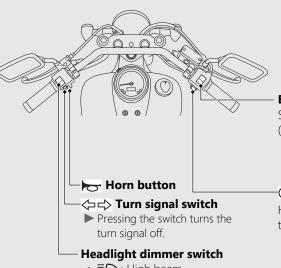



Engine stop switch

Should normally remain in the \bigcap (Run) position.

In an emergency, switch to the (Stop) position (the starter motor will not operate) to stop the engine.

③ Start button

Headlight turns off when operating the starter motor.

- ≣D : High beam
- ≣D : Low beam