

Troubleshooting

| | |
|--|-------|
| Engine Will Not Start | P. 81 |
| Overheating (High coolant temperature indicator is on) | P. 82 |
| Warning Indicators On or Flashing | P. 83 |
| Low Oil Pressure Indicator | P. 83 |
| PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL) | P. 83 |
| Tire Puncture | P. 84 |
| Electrical Trouble | P. 93 |
| Battery Goes Dead | P. 93 |
| Burned-out Light Bulb..... | P. 93 |
| Blown Fuse | P. 97 |