
3. Remove the exhaust pipe joint nuts.

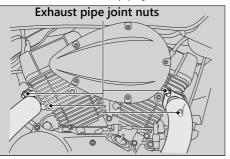

- **4.** Remove the muffler bracket bolts and nuts, washers.
- 5. Remove the mufflers.

